

 
Catalogue

I . Safety Instruction.....	2
II . Learning All Parts of the Camera.....	3
III. Technical Parameters.....	4
IV. Usage Profile.....	6
V . Menu and Function Introduction.....	8
VI. Photo/Video Download.....	11
VII. Maintenance and Safety.....	11

I . Safety Instruction

- Do not use the camera if there is any abnormal condition.
- The user shall be responsible for any injury or damage caused by failure to follow the instructions.
- Do not place the camera in a humid environment and keep it dry.
- If you are using a power adapter during a thunderstorm, do not touch the power plug, it may make you get an electric shock.
- Do not use the camera if foreign objects enter.
- Do not insert metal objects or other foreign objects into camera access points, such as SD memory card slots. the manufacturer will not be responsible for any loss caused.
- Do not try to modify the camera.
- Do not use the camera while driving.
- Do not cover or encase the camera with cloth. please place the camera in a well ventilated place.
- Children under 12 years of age are strictly prohibited from taking out SD.

II. Learning All Parts of the Camera

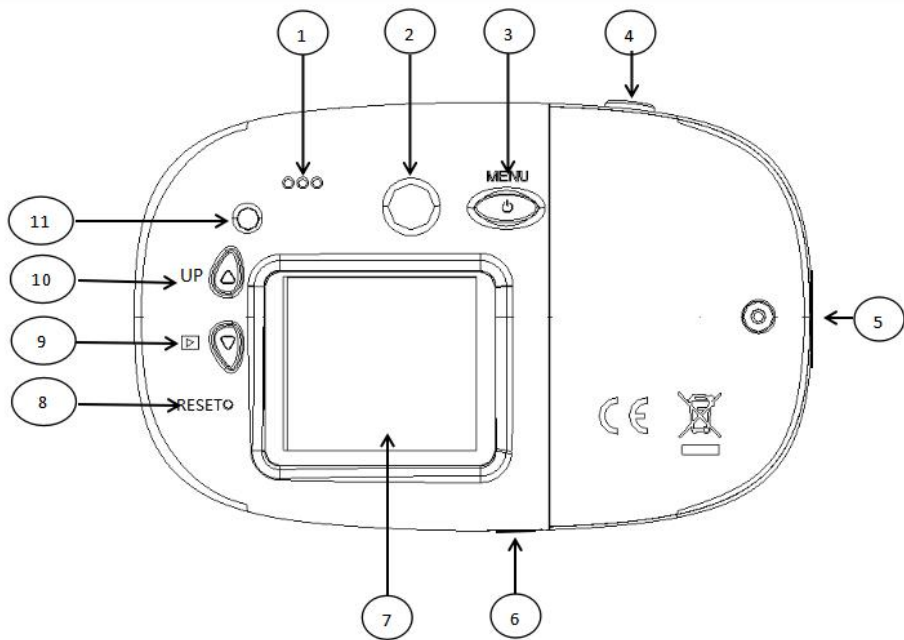

Corresponding parts in the schematic diagram :

1. Buzzer	2. Viewfinder	3. On/Off/Menu Key	4. Shoot/Confirm Key
5. SD Card Slot	6. USB Interface	7. Display	8. Reset
9. Playback/Down Key	10. Up Key	11. Indicator Light	

III. Technical Parameters

Image Resolution	1600*1200, 1280*960, 640*480
Video Resolution	1280*720, 640*480
Storage Medium	External SD Card (1G to 32GB)
File Format	JPEG, AVI
Capture Mode	Burst, Delay Pictures, Off
Date Stamp	Off, On
White Balance	Automatic

Exposure Control	Automatic
Flash Light Mode	Automatic (It will automatically flash when the light is dark, and will not flash when the light is bright.)
Light Sensitivity	Automatic
Computer Connection	USB2.0
TFT Screen	1.44 Inch HD Color screen
Power Management	Built-in 3.7V Lithium Polymer Battery
Language	English, Simplified Chinese, Traditional Chinese, Japanese, France, German, Korean, Portuguese, Russian, Spanish, etc
Focal length	f=2.6mm
Aperture	F=2.4
Automatic Shutdown	5Min
Operating System	WIN98/2000/ME/XP/WIN7/

Note: any changes to the parameters are subject to notice, and the final power of interpretation shall be vested in the company.

IV. Usage Profile

1. Installation and replacement of SD card;

- a. Put the SD card face up into the SD card slot.
- b. Press the SD card inward to take out the card.

Matters need attention:

- Please use the high speed legal copy SD card C10 above, otherwise machine failure will happen.
- The sound of "click" in the process of inserting or removing the card means that the SD card has been installed or removed.
- Cameras may not be able to recognize the nonstandard SD card or formatted one in another device(such as the computer). Please format the card in this camera.

2. Switch on/off camera

- a. Press the camera On/Off/Menu Key for a long time, and the camera will enter the working state.
- b. If no operation occurs within 5 minutes, the camera will automatically shut down in order to save power.
- c. When the camera is switched on, press the On/Off/Menu Key for a long time, and the camera will be switched off.

3. Indicator light and charging instructions

- a. After the camera is turned on, the green indicator lights up.
- b. When USB is plugged in to charge the camera, the red indicator lights up, slightly lights up or goes out after being fully charged.

4. Key function

- a. On/Off/Menu Key: long press to start the machine in the off state and short press to switch modes (photograph, video and setting) in the on state.
- b. Shoot/Confirm Key: take photo, take video, play AVI, pause AVI, enter submenu in menu mode and setting confirmation.
- c. Up key: flip up.
- d. Playback/Down key: quick access to playback, down selection in menu mode.
- e. Reset: reset.

V. Menu and Function Introduction

- After the camera is turned on, press On/Off/Menu Key to sequentially switch

from photographing, video shooting to setting mode. After switching to setting mode, press Up Key or Down key to select the submenu. Press Shoot/Confirm Key to enter the submenu option and press Up Key or Down key to select the required option, press Shoot/Confirm key to confirm and return to the upper menu. Press On/Off/Menu key to exit the menu directly. (the setting menu includes ten options: Image Resolution, Video Resolution, Capture Mode, Date Stamp, Date/Time, Language, Frequency, Format, Default Setting, Version. shooting method, date mark, time setting, language, light frequency, language, formatting, resetting system, version.)

1. Image Resolution

- 1) 2M: 1600*1200
- 2) 1.3M: 1280*960
- 3) VGA 680*480

2. Video Resolution

- 1) 720P 1280*720
- 2) VGA 680*480

3. Capture Mode

Enter the "Capture Mode" menu and "Burst Photo, Delay Pictures(5s), Off" can be selected.

4. Date Stamp

Enter the "Date Stamp" menu and selecting "Off/On" to set whether the time and date when shooting are marked on the photo or video. If you choose Off, the time and date will not be marked. If you choose On, it will be marked.

5. Date/Time

Enter the " Date/Time" menu to set the date, time, and year/month/day format. Press Shoot/Confirm Key to switch to the item to be set. Press Up Key or Down key to adjust and press On/Off /Menu key to exit this menu.

6. Language

Enter the "Language" menu, " English, Traditional Chinese, Simplified Chinese, Japanese, French, German, Korean, Turkish, Portuguese, Russian, Spanish, Arabic" can

be selected.

7. Frequency

Enter the "Frequency" menu , "50Hz or 60Hz" can be selected. Corresponding setting shall be performed according to the supply frequency used in the country or region (Incorrect frequency setting will result in a frequency stripe on the photos taken).

8. Format

Enter the "Format" menu and format the camera memory as prompted (If SD card is inserted, then format the SD card). After formatting, all the memory (SD card) files are lost (Please use this function with caution).

9. Default Setting

Enter the "Default Setting" menu, the factory settings can be restored as prompted.

10. Version

Enter the "Version" menu to view version information.

Note: If the camera is not operated within 5 minutes, the camera will be automatically powered off to save power.

VI. Photo/Video Download

The camera and computer can be connected with the USB cable. Press the Shoot/Confirm Key to enter the Storage mode to download the photos and videos.

VII. Maintenance and Safety

1. Keeping the lens clean can help you take better pictures in the most possible focal length. Wipe the fingerprints and dust on the lens and LCD screen lightly with dry and soft gauze.
2. If you want to move the camera from a low temperature environment to a warm environment, please make sure wait for a few minutes before using it to adjust the camera to the current ambient temperature.

3. In order to avoid the danger of electric shock, do not turn on the camera or repair the camera by yourself.
4. Keep the camera dry. If moisture enters the camera, stop using it immediately. The camera must be completely dried in the air before being reused.