
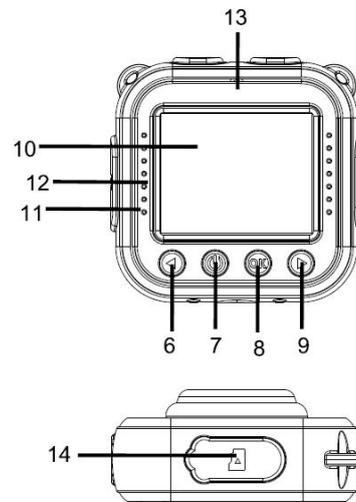


## Appearance

---

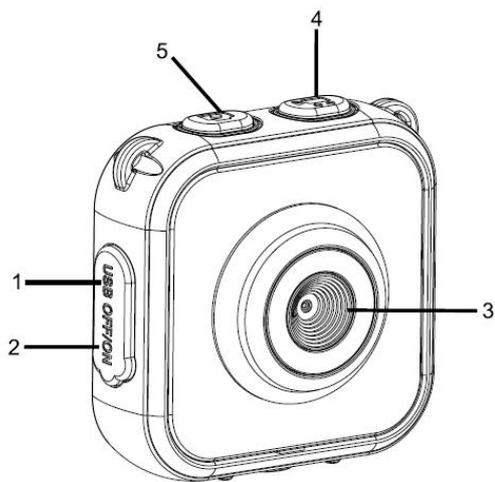

1. Micro USB Port.
2. Battery Power Switch.
3. Lens
4. Recording Button
5. Take Photos button.
6. Page Up button.
7. Power on/off Button


8. Shutter Button /WIFI
9. Page Down Button
10. LCD
11. Busy indicator light(blue),  
Charge indicator light(red).
12. Speaker
13. Microphone
14. Micro SD card slot.

## Start to use

---

### 1. Charge the built-in lithium battery

The camera is equipped with external 3.7V lithium battery. Please ensure power available for the camera and timely charge it in case of low battery

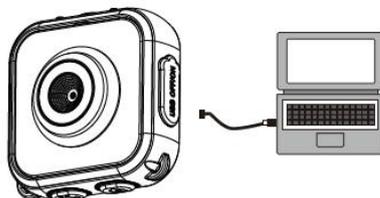


Connect the camera to computer for charging under shutdown status. The charging indicator light will on when charging, and will be off when the battery is fully charged. Generally, the battery can be fully charged after about 3 hours.

### 2. How to use the memory card

2.1 Properly insert the TF card into the card holder as per the instructions indicated near the card holder.

2.2 To remove the TF card, press the end of memory card gently the card will be ejected.

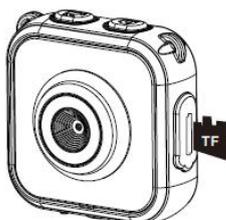


Note: The camera is not equipped with built-in memory. Please insert memory card before using.

### 3. Power on /off

**Please switch the battery power switch to “I” status before you turn on the camera**

3.1 Power on: short-press the power button  the screen will be on and the camera will be started.

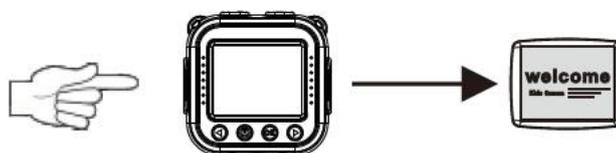

3.2 Power off: Hold on Power Button  for 3 seconds when the camera is in the idle state to turn it off.

3.3 Auto screen off: the screen will turn off automatically after 30s, 1minuts and 3 minutes when LCD brightness in the setting are handled respectively. But it will not turn off when off in the setting was selected.

3.4 Power off when the camera is lack of electricity. When electrical capacity of the battery is very low, an icon of  will be displayed on the LCD screen, prompting you to charge it in time. When the icon flickers the camera will be turned off automatically.

**Tips: Under long time not using camera and protecting battery, please switch the battery power button to “I” status**

4. Recording mode,photo mode,playback mode and system settings

**4.1 Recording Mode**


When power is on, the camera goes into the video recording mode as default with preview mode shown accordingly. You can short-press either Recording Button  on the top of the camera or Shutter Button  on the panel to start recording.Stopping it is also the same operation of the both buttons mentioned previously. Meanwhile, voice recording is also available when you are requested to press Page Down Button  by turning the icon  on.

**4.2 Photo Mode**

When you turn on your camera, you can short-press the take photo button  to enter photo mode, short-press it again to capture your photo.

**4.3 Playback Mode**

In recording mode or photo mode, you can short-press the power on button .the LCD display will show as follow:

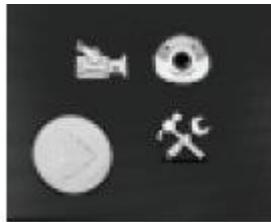

4.4 You can short-press up button  and page down button  to change modes.

Then short-press shutter button  to confirm mode you choose. Then short-press power on button  to exit it.



: Recording mode.



:Photo mode



: Playback mode



: System Settings

You view the captured videos and photos in one of the following ways:

1. Please press button enter the Playback mode as above steps, then press down button to select the video or photo as desired.  
To playback a video, press shutter button to start, press shutter button again to pause

playing videos and press power on button to stop playing videos. In playback section, press page up button or page down button to scroll the photos and videos. You can press power on button to enter to the mode choice.

2. Connect your camera to a computer using the supplied USB cable to view your captured videos and photos.

#### 4.5 System Settings

You can enter to system settings as above steps, short-press Page Up Button  or Page down button  for selection. And short-press the shutter button  to confirm. Then short-press Power Button  to exit.

The Functions are as follows,

1. Cyclic Record: Off, 1min, 2min, 3min
2. Self Timer: Off, 2S,5S,10S
3. Burst Shot: Off, 3,5,10
4. Recording: On,Off
5. Exposure: -3,-2,-1,0,1,2,3
6. Auto Power Off: Off,30S, 1min,3min
7. Beep Sound: On, Off
8. Date Stamp: On, Off
9. Data/Time: YYYY/MM/DD, HH/MM/SS
10. Language: Chinese,English,Deustsch,Japanese,Espanol, Francais,Italiano,Portuguese,PYCCKNN.
11. LCD Brightness: Off, 30S, 1min,3min
12. Delete Current? Ok, Cancel
13. Delete All? Ok, Cancel
14. Default Setting: Ok, Cancel
15. Format: Ok, Cancel
16. Version

#### 4.6 WIFI Connection and APP used

When the camera power on, Long-Press the shutter/WIFI Button  for 2-3 seconds, the screen will display the information as the following.



You can open App to find WIFI named wifi\_camera\_00e and make it connected with default password typing into. the App used in the camera is ISDV. Scan them respectively:



**ISO**



**Android**

The mode can be automatically switched to the removable hard disk. Removable disk icon will appear in the “My computer” window. The pictures and video files you shot stored in the removable disk H: \DCIM\DCIM folder (H is this equipment removable disk).



Note: During file downloading, it is prohibited to disconnect USB connection, and plugging out the memory card when USB connected is also prohibited to avoid loss of data.

#### Technical Parameters

Image Sensor	1.3 mega-pixel CMOS image sensor
Function Mode	Recording, photo, playback
LCD Screen	1.77” LCD Screen
Picture resolution	1280 x 720
Video resolution	720P
Storage medium	TF card(Max up to 32GB)
USB port	USB2.0
Power Supply	3.7V 500mAh rechargeable lithium battery
Menu language	Chinese,English,Deustsch,Japanese,Espanol, Francais,Italiano,Portuguese,PYCKNN
Power Save	30S/1min/3min/Off
Operation system requirements	Windows XP /Vista /7 / 8, Mac 10.8