


Action Camera


Wi-Fi · Waterproof · Ultra HD



THE BASICS

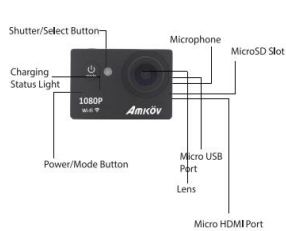

WATERPROOF HOUSING

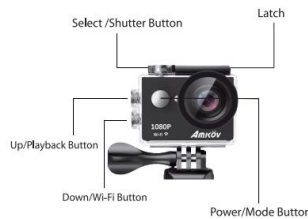

ACCESSORIES



MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.



GETTING STARTED

HELLO

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

To power ON:
Press the **Power/Mode Button**.

To power OFF:
Press and hold the **Power/Mode Button**.

OVERVIEW

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:



Video Record Video

Photo Capture a single photo.

Burst Photo Capture photo bursts

Time Lapse Shoot a series of photos at set time intervals

Settings Adjust camera settings, resolution and more.

SETTINGS



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. Or use the **Up/Playback** or **Down/Wi-Fi Button** to cycle through the various options.

Video Resolution: 1080p30/720p60

MicroSD Card	1080p30	720p60
32 GB	240 mins	320 mins
16 GB	120 mins	160 mins
8 GB	60 mins	80 mins

Looping Video: Off/On

Time Stamp: Off/Date/Date & Time

Exposure: +2.0/+1.7/+1.3/+1.0/+0.7/+0.3/0

Photo Resolution: 12M/8M/5M/2M

Burst Photo: 3 Photos

Time Lapse: 2s/3s/5s/10s/20s/30s/60s

Continuous Lapse: Off/On

Power Frequency: 50Hz/60Hz/Auto

Language: English/Traditional Chinese /Italian/Spanish/Portuguese/German/ Dutch/France/Czech/Polish/Turkish/ Russian/Japanese/Korean/Thai

Date & Time: MM/DD/YY, DD/MM/YY, or YY/MM/DD

Sound Indicator: Shutter On/Off, Start Up 1/2/3 None, Beep On/Off, Volume 0/1/2/3

Upside Down: On/Off

Screen Saver: Off/1 min/3 min/5 min

Power Saver: Off/1 min/3 min/5 min

Format: No/Yes

Reset: No/Yes

Version

VIDEO MODE

Video

To record Video, verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To start recording:

Press the **Shutter/Select Button**. The camera will emit one beep and the **Camera Status Lights** will flash while recording.

To stop recording:

Press the **Shutter/Select Button**. The **Camera Status Lights** stop flashing and the camera emits one beep to indicate recording has stopped.

8. **To exit**, hold down the **Up/Playback Button** for two seconds.

STORAGE/MICROSD CARDS

This camera is compatible with **8GB, 16GB, and 32GB** capacity **microSD, microSDHC, and microSDXC** memory cards. You must use a **microSD** card with a **Class 10** speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

BATTERY

To charge the battery

Use the 1A USB charger and USB cable that come standard with your camera.

*Third-party chargers and accessories may not be supported.

* Charging Time: 5 hours

This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

PHOTO MODE

Photo

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To take a photo:

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

BURST PHOTO MODE

Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Burst Photo** mode, your camera takes 3 photos in 1.5 seconds.

CAMERA APP

Connecting to the Ez iCam App

The **Ez iCam App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the **Ez iCam App** to your smartphone or tablet at the **Google Play** or **Apple App Store**.
2. Press the **Power/Mode Button** to power camera **ON**.
3. Make sure the camera is in **Camera modes**.
4. Press the **Down/Wi-Fi Button** to turn on **Wi-Fi**.*
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "**ICAM-Wg(R)**" followed by a series of numbers. (The default password is 1234567890)
6. Open the **Ez iCam App** on your smartphone or tablet

To take a Burst Photo series:

Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

TIME LAPSE MODE

Time Lapse

To capture a **Time Lapse** series, verify the **Continuous Lapse** is **ON** and camera is in **Time Lapse** mode. If the **Time Lapse** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at **2,3,5,10,20,30** or **60** second intervals.

To take Time Lapse:

Press the **Shutter/Select Button**. The camera initiates countdown and emits the camera shutter sound each time a **Photo** is taken.

QUICK MODES

To enter the Quick Modes menu

1. Verify the camera is in **Camera modes**.

* Press and hold the **Down/Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **Ez iCam App** is compatible with smartphones and tablets listed below.

For Apple iOS
* iPhone 6/6s/7 (Plus)(iOS10)
* iPad Air & Mini (iOS10)

For Android:
* Android 4X Quad-core devices



iOS / Android App Download

COMPATIBILITY

* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might not be available on some devices.

